

Version 11

## Copyright

© 1996-2015 Cadsoft Corporation. No part of this guide or the accompanying software may be reproduced or transmitted, electronically or mechanically, without written permission from Cadsoft Corporation. Reproduction and transmission includes, but is not limited to, photocopying, recording, and copying onto any storage and information retrieval system. Windows is either a registered trademark or a trademark of Microsoft Corporation in the United States and/or other countries. All other trademarks are the property of their respective owners.

## Contents

hapter 1: Getting Started	
Welcome	
About this Guide	
System Requirements	
Uninstalling a Previous Version	
Installing the Program	
Starting the Program	
Activating the Program	
Starting a New Project	
Starting New Projects from a Specific Template	
Starting New Projects Without Using Templates	
Enabling Template Selection at Project Startup	
Opening a Project from an Older Version	
Viewing Sample Projects	
Selecting a Unit of Measure	
Suppressing Trailing Zeros in Measurements	
Suppressing Metric Units in Dialogs	
Adjusting Your Display Settings	
Videos and Tutorials	
Quick Start Guide	
Online Help	
Context-sensitive Help	
Tutor	
Glossary of Terms	
Green 3D Home.com	
Technical Support	
hapter 2: Touring the Workspace	
Title Bar	
Menus	
Toolbars and Toolbar Tabs	
Building Toolbar	
Interiors Toolbar	
Landscape Toolbar	
Terrain Toolbar	
Analyze Toolbar	
Help Toolbar	
View Control Toolbar	
Zoom and Navigate Toolbar	
Navigator	
Commander	
View Tabs	
Model View vs. Worksheet View	

Scroll Bars	
Catalog Panel	
Searching the Catalog	
Status Bar	
Auto Scroll	
Chapter 3: Drawing & Editing Basics	17
Inserting Elements	
Selecting an Insertion Method for Line-Drawn Elements	
Selecting an Insertion Method for Single-Click Elements	
Repeating the Insertion of a Line-Drawn Element	
Going into Selection Mode for Editing	
Selecting Elements for Editing	
Deselecting Elements	
Making Elements on All Locations Selectable in 2D	
Enabling/Disabling Screen Tips	
Accessing Edit Tools	
Chapter 4: Building Locations	21
Defining Building Locations	
Adding a Building Location	
Making a Building Location Current	
Allowing a Different Current Location Per View Window	
Location Dimming	
Chanter 5: House Builder Wizard	
Onapter 5. House Bunder Wizard	
Using the House Builder Wizard	
Using the House Builder Wizard Automatically at Startup	
Using the House Builder Wizard Automatically at Startup Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration	
Using the House Builder Wizard Automatically at Startup Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration Chapter 6: Walls.	
Using the House Builder Wizard Automatically at Startup Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration Chapter 6: Walls Drawing Walls	
Using the House Builder Wizard Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> Drawing Walls from an Offset Baseline	
Using the House Builder Wizard Automatically at Startup Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> Drawing Walls from an Offset Baseline Adding a Story	
Using the House Builder Wizard Automatically at Startup Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> Drawing Walls Drawing Walls from an Offset Baseline Adding a Story Using the Floor and Foundation Builder Wizard	
Using the House Builder Wizard Automatically at Startup Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> Drawing Walls Drawing Walls from an Offset Baseline Adding a Story Using the Floor and Foundation Builder Wizard Solid Filling Walls and Other Elements	
Using the House Builder Wizard Automatically at Startup Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> Drawing Walls Drawing Walls from an Offset Baseline Adding a Story Using the Floor and Foundation Builder Wizard Solid Filling Walls and Other Elements Editing Solid Fill Colors	
Using the House Builder Wizard Automatically at Startup Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> Drawing Walls Drawing Walls from an Offset Baseline Adding a Story Using the Floor and Foundation Builder Wizard Solid Filling Walls and Other Elements Editing Solid Fill Colors Disabling Solid Fill for Individual Elements	
Using the House Builder Wizard Automatically at Startup	
Using the House Builder Wizard Automatically at Startup	
Using the House Builder Wizard Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> Drawing Walls Drawing Walls from an Offset Baseline Adding a Story Using the Floor and Foundation Builder Wizard Solid Filling Walls and Other Elements Editing Solid Fill Colors Disabling Solid Fill for Individual Elements Editing Dynamic Dimension Settings Resizing a Wall Layout Defining a Wall's Surfaces	
Using the House Builder Wizard Automatically at Startup Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> . Drawing Walls. Drawing Walls from an Offset Baseline Adding a Story Using the Floor and Foundation Builder Wizard Solid Filling Walls and Other Elements. Editing Solid Fill Colors Disabling Solid Fill for Individual Elements. Editing Dynamic Dimension Settings Resizing a Wall Layout Defining a Wall's Surfaces Lengthening and Shortening Walls.	
Using the House Builder Wizard Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> Drawing Walls Drawing Walls from an Offset Baseline Adding a Story Using the Floor and Foundation Builder Wizard Solid Filling Walls and Other Elements Editing Solid Fill Colors Disabling Solid Fill for Individual Elements Editing Dynamic Dimension Settings Resizing a Wall Layout Defining a Wall's Surfaces Lengthening and Shortening Walls Editing the Width of a Wall	
Using the House Builder Wizard Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> Drawing Walls from an Offset Baseline Adding a Story Using the Floor and Foundation Builder Wizard Solid Filling Walls and Other Elements Editing Solid Fill Colors Disabling Solid Fill for Individual Elements Editing Dynamic Dimension Settings Resizing a Wall Layout Defining a Wall's Surfaces Lengthening and Shortening Walls Editing the Width of a Wall	
Using the House Builder Wizard Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> Drawing Walls from an Offset Baseline Adding a Story Using the Floor and Foundation Builder Wizard Solid Filling Walls and Other Elements Editing Solid Fill Colors Disabling Solid Fill for Individual Elements Editing Dynamic Dimension Settings Resizing a Wall Layout Defining a Wall's Surfaces Lengthening and Shortening Walls. Editing the Width of a Wall Editing the Height of a Wall Lowering or Raising the Exterior Face of a Wall	
Using the House Builder Wizard. Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> . Drawing Walls. Drawing Walls from an Offset Baseline Adding a Story Using the Floor and Foundation Builder Wizard Solid Filling Walls and Other Elements. Editing Solid Fill Colors Disabling Solid Fill Colors Editing Dynamic Dimension Settings Resizing a Wall Layout Defining a Wall's Surfaces Lengthening and Shortening Walls Editing the Width of a Wall. Editing the Height of a Wall Lowering or Raising the Exterior Face of a Wall. Forcing Wall Sides to be Exterior.	
Using the House Builder Wizard Launching the House Builder Wizard Automatically at Startup Creating a Custom House Builder Wizard Configuration <b>Chapter 6: Walls</b> Drawing Walls Drawing Walls from an Offset Baseline	25 28 28 31 31 31 31 33 
Using the House Builder Wizard Automatically at Startup	

Stepping a Wall	
Extending Walls to the Roof	
Making Walls Level	
Moving Walls	
Rotating a Wall	
Curving a Wall	
Breaking a Wall	
Breaking a Wall into Specific Lengths	
Moving Wall Breaks	
Deleting a Wall	
Applying Different Materials to Walls	
Adding Paint and Wallpaper	
Adding Trim to Walls	
Applying a Profile to Trim	
Adding Corner Details to Walls	
Editing Corner Details	
Chapter 7: Footings, Columns & Mer	nbers49
Attaching Strip Footings to Walls	
Inserting Strip Footings by Picking Points	
Editing the Shape of a Strip Footing	
Editing the Size of Strip Footings	
Moving/Stretching Strip Footings	
Lengthening and Shortening Strip Footings	
Breaking Strip Footings	
Attaching Mono Footings to Columns	
Inserting Mono Footings by Picking Points	
Editing the Mono Footing Type	
Editing the Size of Mono Footings	
Inserting Columns	
Editing the Shape of a Column	
Editing the Dimensions of a Column	
Editing the Elevation of a Column	
Inserting Members	
Inserting Members with Custom Settings	
Inserting a Horizontal Member	
Inserting a Sloping Member	
Inserting a Member by Matching a Plane	
Inserting Multiple Members Simultaneously	
Editing a Member's Insertion Reference Point	
Inserting Portal Frames	
Rotating a Member's Profile	
Lengthening or Shortening a Member	
Extending/Trimming Members to a Cutting Edg	2
Breaking a Member	
Breaking Members at Other Elements	
Offsetting a Member	

Adjusting a Member to a Plane	
Extending a Member to a Plane	
Editing the Shape of a Member	
Editing the Dimensions of a Member	
Defining the Ends of a Member	
Mitering Members	
Chapter 8: Doors, Windows & Openings	61
Inserting Doors	61
Moving a Door	61
Flipping a Door	
Flipping a Door Swing	
Editing Door Swing Properties	
Specifying the Definition of a Right-hand vs Left-hand Door	
Editing Door Types	
Editing the Size of a Door	
Editing the Shape of a Door	
Displaying a Highlite or Sidelites on a Door	
Editing a Door's Sidelites and Highlites	
Editing a Door Leaf	64
Editing Door Details	
Removing Trim from a Door Opening	
Inserting Windows	
Moving a Window	
Flipping a Window	
Editing Window Types	
Editing a Window's Size Properties	
Displaying a Highlite, Lowlite or Sidelites on a Window	
Editing a Window's Sidelites, Highlites and Lowlites	
Editing Window Details	
Removing Trim from a Window Opening	
Controlling the Display of Window Opening Symbols	
Inserting Wall Openings	
Creating a Niche	
Flipping a Niche	
Editing the Appearance of a Niche	
Moving a Wall Opening	
Editing the Size of a Wall Opening	
Stretching Doors, Windows and Openings	
Editing the Shape of a Wall Opening	71
Removing Trim from a Wall Opening	71
Editing the Appearance of a Wall Opening in 2D Plan View	
Inserting Doors, Windows and Openings to Center	
Inserting Doors, Windows and Openings to Edge	
Inserting Shutters	
Editing Shutters	
Specifying Settings for Door, Window and Opening Marks	

## Contents

Specifying How Doors, Windows and Openings are Marked	74
Displaying/Hiding Door, Window and Opening Marks	
Chapter 9: Floors & Ceilings	75
Inserting a Structural Floor Throughout a Building Location	
Inserting a Structural Floor in a Room	75
Inserting a Structural Floor by Picking Points	75
Inserting a Bearing Line in a Structural Floor	
Stretching or Moving a Bearing Line in a Structural Floor	
Removing a Bearing Line	
Moving the Framing Base Point in a Structural Floor	77
Adding Members to a Structural Floor	77
Removing a Member from a Structural Floor	77
Cutting an Opening in a Structural Floor	
Editing Structural Floor Properties	77
Automatic Floors	
Moving Defined Floor Edges	
Disabling or Enabling Automatic Floor Insertion	
Inserting a Floor Throughout a Building Location	
Inserting a Floor in a Room	
Defining the Extents of Floors to be Inserted in Rooms	80
Inserting a Floor by Picking Points	
Resizing or Reshaping a Floor	
Dividing a Room	
Editing the Thickness of a Floor	81
Cutting an Opening in an Automatic Floor	
Cutting an Opening in a Manually Inserted Floor	
Resizing or Reshaping a Floor Opening	
Removing an Opening from an Automatically Inserted Floor	
Removing an Opening from a Manually Inserted Floor	
How Ceilings are Created	
Inserting a Ceiling Throughout a Building Location	
Inserting a Ceiling in a Room	
Inserting a Ceiling By Picking Points	
Creating a Tray Ceiling	
Creating a Cathedral Ceiling	
Defining the Extents of Ceilings to be Inserted in Rooms	
Resizing or Reshaping a Ceiling	
Cutting Openings in Ceilings	
Resizing or Reshaping Ceiling Openings	
Removing an Opening from a Ceiling	
Chapter 10: Stairs, Ramps & Railings	87
Inserting Stairs and Ramps	
Parts of a Staircase	
Editing Stair Size Properties	
Editing a Staircase Layout	
Editing Stair Details	

Editing the Appearance of a Stair Cut Line	
Editing General Ramp Properties	
Editing the Layout of a Ramp	
Inserting Railings on Both Sides of a Staircase or Ramp	
Inserting a Railing on the Left Side of a Staircase or Ramp	
Inserting a Railing on the Right Side of a Staircase or Ramp	
Inserting a Railing Along the Center of a Staircase or Ramp	
Inserting a Horizontal Railing	
Parts of a Railing	
Editing Railing Properties	
Changing the Length of a Railing	94
Stretching a Railing	
Chapter 11: Roofs	95
Inserting an Automatic Roof Over Perimeter Walls	
Inserting a Roof By Picking Points	
Selecting a Roof for Editing	
Changing the Way a Lower-Story Roof is Created	
Converting a Hip Roof to a Gable Roof	96
Defining the Material at Gable Ends	
Displaying Walls Beneath Gable Ends	
Stretching a Roof	
Matching Roof Planes	
Reshaping a Roof	
Breaking a Roof Surface	
Creating Gables Mid-Fascia	
Editing the Basic Properties of a Roof Surface	
Editing the Height of a Roof Surface	
Editing a Roof's Frame Details	
Converting a Roof to Surfaces	
Inserting an Opening in a Roof	
Removing a Roof Opening	
Creating Dormers	
Inserting Skylights	
Editing the Properties of a Skylight	
Inserting Roof Accessories	
Chapter 12: Surfaces	107
Creating a Surface	
Resizing or Reshaping a Surface	
Adding a Node to a Surface	
Editing the Slope of a Surface	
Editing the Location of a Surface's Lower or Upper Point	
Editing the Up-Slope Direction of a Surface	
Joining Surfaces Together	
Defining Roof Surface Edge Properties	
Editing Roof Surface Edge Details	
Curving a Surface Edge	

Editing the Thickness of a Surface	
Cutting an Opening in a Surface	
Editing Surface Openings	
Removing an Opening from a Surface	
Chapter 13: Interiors	113
Creating a Kitchen with the Kitchen Builder Wizard	
Creating a Custom Kitchen Wizard Configuration	
Creating a Bathroom with the Bathroom Builder Wizard	
Creating a Custom Bathroom Wizard Configuration	
Inserting Cabinets	
Editing Cabinet Properties	
Inserting Appliances	
Inserting Interior Furniture	
Inserting Electronics	
Inserting Interior Accessories	
Inserting Equipment	
Inserting Interior Lighting	
Changing the Way a Light Snaps Upon Insertion	
Editing a Light Fixture's Light Source	
Turning a Light On or Off	
Inserting Electrical Elements	
Inserting Electrical Wiring	
Stretching and Reshaping Wiring	
Editing the Line Style of Wiring	
Selecting a Default Line Style for Wiring	
Inserting Plumbing Fixtures	
Inserting HVAC Elements	
Chapter 14: Framing	127
Displaying Framing	
Returning to a Non-Framed View	
Wall Framing	
Selecting a Framing Member for Walls	
Specifying Whether Walls are Load-bearing or Non-load-bearing	
Defining Wall Framing Options for Building Locations	
Going into Framing Mode	
Editing the Infill Configuration for Individual Walls	
Editing the Framing Rule for Individual Walls	
Editing the Span Table Selection for Individual Walls	
Editing the Head/Sill/Jamb Configuration for Individual Openings	
Editing Intersection Framing	
Creating Custom Intersection Framing Configurations	
Specifying Floor Framing Options	
Specifying Ceiling Framing Options	
Specifying Roof Framing Options	
Converting Framing to Members	

Chapter 15: Wall Panels	141
Setting Up a Wall Panel Tagging System	141
Displaying/Hiding Wall Panel Tags	
Defining Wall Panel Settings	
Previewing Wall Panels	
Viewing and Editing the Properties of Individual Wall Panels	
Flipping a Wall Panel's View Side	
Editing Wall Panel Numbering	
Re-ordering Wall Panels Manually	
Editing Wall Panel Names	
Applying Name Changes to Wall Panels	
Editing Content Display in Wall Panel Diagrams	
Editing Wall Panel Dimension Settings	
Editing the Dimension Style Used in Wall Panels	
Editing Wall Panel Schedule Settings	
Editing the Text Styles Used for Wall Panels	
Editing Wall Panel Insertion Settings	
Specifying Default Print Settings for Wall Panel Diagrams	
Inserting Wall Panels onto Worksheets	
Regenerating Wall Panels	
Editing Inserted Wall Panels Manually	
Exporting Wall Panel Data to a CSV File	
Chapter 16: Terrain	159
Defining the Size of the Terrain	
Defining the Base Level of the Terrain	
Cutting the Terrain Around the Building	
Defining the Terrain Mesh Spacing	
Controlling the Display of Terrain Contours	
Selecting a Material for the Terrain	
Displaying/Hiding the Terrain Boundary Line	
Turning the Terrain On and Off	
Creating Hills and Valleys	
Editing the Height or Shape of a Hill	
Creating Berms and Trenches	
Stretching a Berm	
Editing the Height or Shape of a Berm	
Creating Plateaus	
Stretching a Plateau	
Reshaping a Plateau	
Editing the Height or Peak Shape of a Plateau	
Creating Slopes	
Stretching a Slope	
Editing the Height of a Slope	
Editing the Angle of a Slope	
Importing Site Data	
Converting the Terrain to a TIN Mesh	

Adding Spot Level Points to a TIN Me	esh	169
Editing the Elevation of Spot Level Po	pints	170
Adjusting the Smoothness of Mesh Co	ontours	170
Controlling the Display of Terrain Co	ntour Labels	171
Resetting the Terrain		171
Creating Paths, Sidewalks and Drivev	vays	171
Stretching a Path Element		172
Editing the Thickness or Width of a Pa	ath Element	172
Creating a Pad		173
Disabling the Hug Terrain Option		173
Resizing a Pad		173
Reshaping a Pad		173
Editing the Thickness of a Pad		173
Drawing Retaining Walls		174
Creating a Site Boundary Using the R	eference Angle Method	174
Creating a Site Boundary Using the A	ngle Bearing Method	175
Stretching a Site Boundary		176
Editing the Length or Direction of Site	e Boundary Edges	176
Defining Setback Distances		176
Clipping the Terrain to the Site Bound	lary	177
Curving a Site Boundary Edge		177
Editing a Site Boundary's Line, Text a	nd Peg Styles	178
Selecting a Method of Measurement V	Vhen Drawing a Site Boundary	178
		101
Chapter 17: Landscaping		. 101
Inserting Plants		
Chapter 17: Landscaping Inserting Plants Editing the Appearance of a Plant in 2	2D View	
Chapter 17: Landscaping Inserting Plants Editing the Appearance of a Plant in 2 Changing the Age of a Plant	2D View	181 181 181
Chapter 17: Landscaping Inserting Plants Editing the Appearance of a Plant in 2 Changing the Age of a Plant Forcing a Custom Plant Size	2D View	181 181 181 181 182
Chapter 17: Landscaping Inserting Plants Editing the Appearance of a Plant in 2 Changing the Age of a Plant Forcing a Custom Plant Size Seeing Plant Growth Over Time	2D View	181 181 181 181 182 182
Chapter 17: Landscaping Inserting Plants Editing the Appearance of a Plant in 2 Changing the Age of a Plant Forcing a Custom Plant Size Seeing Plant Growth Over Time Applying Seasonal Changes to Plants	2D View	
Chapter 17: Landscaping Inserting Plants Editing the Appearance of a Plant in 2 Changing the Age of a Plant Forcing a Custom Plant Size Seeing Plant Growth Over Time Applying Seasonal Changes to Plants Using the Plant Encyclopedia	2D View	181 181 181 181 182 182 182 182
Chapter 17: Landscaping Inserting Plants Editing the Appearance of a Plant in 2 Changing the Age of a Plant Forcing a Custom Plant Size Seeing Plant Growth Over Time Applying Seasonal Changes to Plants Using the Plant Encyclopedia Encyclopedia Main Page	2D View	
Chapter 17: Landscaping Inserting Plants Editing the Appearance of a Plant in 2 Changing the Age of a Plant Forcing a Custom Plant Size Seeing Plant Growth Over Time Applying Seasonal Changes to Plants Using the Plant Encyclopedia Encyclopedia Main Page Selecting a Plant to View	2D View	
Chapter 17: Landscaping Inserting Plants Editing the Appearance of a Plant in 2 Changing the Age of a Plant Forcing a Custom Plant Size Seeing Plant Growth Over Time Applying Seasonal Changes to Plants Using the Plant Encyclopedia Encyclopedia Main Page Selecting a Plant to View Viewing Plant Information	2D View	
Chapter 17: Landscaping Inserting Plants Editing the Appearance of a Plant in 2 Changing the Age of a Plant Forcing a Custom Plant Size Seeing Plant Growth Over Time Applying Seasonal Changes to Plants Using the Plant Encyclopedia Encyclopedia Main Page Selecting a Plant to View Viewing Plant Information Plant Care Calendar	2D View	181 181 181 182 182 182 182 183 183 183 184 185
Chapter 17: Landscaping Inserting Plants Editing the Appearance of a Plant in 2 Changing the Age of a Plant Forcing a Custom Plant Size Seeing Plant Growth Over Time Applying Seasonal Changes to Plants Using the Plant Encyclopedia Encyclopedia Main Page Selecting a Plant to View Viewing Plant Information Plant Care Calendar World Map Page	2D View	181 181 181 182 182 182 182 182 183 183 184 185 185
Chapter 17: Landscaping   Inserting Plants   Editing the Appearance of a Plant in 2   Changing the Age of a Plant   Forcing a Custom Plant Size   Seeing Plant Growth Over Time   Applying Seasonal Changes to Plants   Using the Plant Encyclopedia   Selecting a Plant to View   Viewing Plant Information   Plant Care Calendar   World Map Page   Notebook Page	2D View	
Chapter 17: Landscaping   Inserting Plants   Editing the Appearance of a Plant in 2   Changing the Age of a Plant   Forcing a Custom Plant Size   Seeing Plant Growth Over Time   Applying Seasonal Changes to Plants   Using the Plant Encyclopedia   Selecting a Plant to View   Viewing Plant Information   Plant Care Calendar   World Map Page   Notebook Page   Picture Page	2D View	
Chapter 17: Landscaping Inserting Plants Editing the Appearance of a Plant in 2 Changing the Age of a Plant Forcing a Custom Plant Size Seeing Plant Growth Over Time Applying Seasonal Changes to Plants Using the Plant Encyclopedia Encyclopedia Main Page Selecting a Plant to View Viewing Plant Information Plant Care Calendar World Map Page Notebook Page Picture Page	2D View	
Chapter 17: Landscaping   Inserting Plants   Editing the Appearance of a Plant in 2   Changing the Age of a Plant   Forcing a Custom Plant Size   Seeing Plant Growth Over Time   Applying Seasonal Changes to Plants   Using the Plant Encyclopedia   Selecting a Plant to View   Viewing Plant Information   Plant Care Calendar   World Map Page   Notebook Page   Picture Page   Diseases Page   Filtering the Plant List	2D View	
Chapter 17: Landscaping   Inserting Plants   Editing the Appearance of a Plant in 2   Changing the Age of a Plant.   Forcing a Custom Plant Size   Seeing Plant Growth Over Time   Applying Seasonal Changes to Plants   Using the Plant Encyclopedia   Encyclopedia Main Page   Selecting a Plant to View   Viewing Plant Information   Plant Care Calendar   World Map Page   Picture Page   Diseases Page.   Filtering the Plant List   Inserting Plants from the Encyclopedia	2D View	
Chapter 17: Landscaping   Inserting Plants   Editing the Appearance of a Plant in 2   Changing the Age of a Plant.   Forcing a Custom Plant Size   Seeing Plant Growth Over Time   Applying Seasonal Changes to Plants   Using the Plant Encyclopedia   Encyclopedia Main Page   Selecting a Plant to View   Viewing Plant Information   Plant Care Calendar   World Map Page   Notebook Page   Picture Page   Diseases Page   Filtering the Plant List   Inserting Plants from the Encyclopedia	2D View	
Chapter 17: Landscaping   Inserting Plants   Editing the Appearance of a Plant in 2   Changing the Age of a Plant.   Forcing a Custom Plant Size   Seeing Plant Growth Over Time   Applying Seasonal Changes to Plants   Using the Plant Encyclopedia   Encyclopedia Main Page   Selecting a Plant to View   Viewing Plant Information   Plant Care Calendar   World Map Page   Picture Page   Diseases Page   Filtering the Plants from the Encyclopedia   Adding Plants to the Catalog from the	2D View	
Chapter 17: Landscaping   Inserting Plants   Editing the Appearance of a Plant in 2   Changing the Age of a Plant.   Forcing a Custom Plant Size   Seeing Plant Growth Over Time   Applying Seasonal Changes to Plants   Using the Plant Encyclopedia   Encyclopedia Main Page   Selecting a Plant to View   Viewing Plant Information   Plant Care Calendar   World Map Page   Picture Page   Diseases Page   Filtering the Plant List   Inserting Plants from the Encyclopedia   Adding Plants to the Catalog from the   Inserting Irrigation   Editing a Sprinkler's Spray Properties	2D View	
Chapter 17: Landscaping   Inserting Plants   Editing the Appearance of a Plant in 2   Changing the Age of a Plant.   Forcing a Custom Plant Size   Seeing Plant Growth Over Time   Applying Seasonal Changes to Plants   Using the Plant Encyclopedia   Encyclopedia Main Page   Selecting a Plant to View   Viewing Plant Information   Plant Care Calendar   World Map Page   Picture Page   Diseases Page.   Filtering the Plants from the Encyclopedia   Adding Plants to the Catalog from the   Inserting Irrigation   Editing a Sprinkler's Spray Properties	2D View	

Reshaping a Filled Area	
Curving a Filled Area	
Inserting Edging	
Cleaning Up the Corners of Edging	
Changing the Length of Edging	
Breaking Edging	
Editing the Height and Width of Edging	
Inserting a Fence	
Stretching a Fence Layout	
Changing the Length of a Fence	
Creating a Break in a Fence	
Parts of a Fence	
Editing the Properties of a Fence	
Inserting a Gate	
Flipping a Gate	
Flipping a Gate's Swing	
Editing the Properties of a Gate	
Building a Shed with the Shed Builder Wizard	
Editing a Shed	
Creating a Custom Shed Builder Wizard Configuration	
Building a Deck with the Deck Builder Wizard	
Building a Deck with the Deck Tool	
Changing the Direction of Deck Boards	
Stretching a Deck	
Reshaping a Deck	
Changing the Height of a Deck	
Editing Deck Post Properties	
Editing Deck Footings	
Editing the Deck Frame	
Controlling the Display of Deck Railings	
Changing the Style of a Deck Railing	
Controlling the Display of Deck Skirting	
Changing the Skirting Material on a Deck	
Inserting an Opening in a Deck	
Resizing a Deck Opening	
Reshaping a Deck Opening	
Removing Deck Openings	
Adding Stairs to a Deck	
Editing the Size of Deck Stairs	
Controlling the Display of Railings on Deck Stairs	
Editing Stringers, Treads and Risers on Deck Stairs	
Inserting Exterior Structures	
Inserting a House Template	
Inserting Exterior Furniture	
Inserting Exterior Accessories	
Inserting Exterior Lighting	

Chapter 18: Editing Elements in Model View	
Undoing the Previous Action	
Redoing an Undo	211
Moving Elements	
Nudging Elements	
Editing Nudge Distances	
Raising and Lowering Elements	
Rotating Elements	
Curving Elements	
Copying Elements on the Same Location	
Copying Objects to Other Locations	
Arraying Elements	
Mirroring Elements	
Replacing Elements	
Applying Colors and Materials with the Materials Paintbrush	
Undoing a Material Application	
Sampling Materials with the Eyedropper	
Viewing Recently Used Materials	
Setting the Maximum Size for the Material History List	
Deleting Elements	
Chapter 19: 2D and 3D Viewing	
Using the Navigator	210
Using the Navigator	
Moving the Navigator	
Viewing the 2D Plan	
Viewing the 2D Flat	
Ouick 2D Viewing	
Displaying 2D Comera Views	
Creating a New 2D Compress View	
Changing a New 3D Camera View	
Turning Compress On and Off	
Changing Vaur Vigurgeint	
Changing four viewpoint	
Changing the Camera Height	
Changing the Target Unit is a 2D Camera View.	
Changing the Target Height in a 5D Camera View	
Coloring a Bookground for 2D Views	
Selecting a background for 5D views	
Walking Around in a 3D Camera View	
Flying Around Your 3D Model.	
Spinning the View with the Look Around 1001	
Resetting the Camera	
Zooming In	
Zooming With a Scroll Wheel Mouse	
Zooming a Selected Area (Zoom Window)	

Zooming to Fit the Drawing Area	
Panning	
Zooming Back to the Previous View	
Zooming and Navigating with the Mouse	
Assigning a Navigation Action to the Middle Mouse Button	
Using Arrow Keys to Pan and Navigate	
Adjusting Zoom and Navigation Speed	
Setting the Zoom and Navigation Motion Response	
Viewing Elevations	
Creating a Custom Elevation	
Turning Elevation Marks On and Off	
Moving Elevation Marks	
Changing the Target of an Elevation	
Editing Elevation Properties	
Detailing Elevations	
Deleting an Elevation	
Creating a Section	
Viewing Sections	
Turning Section Marks On and Off	
Changing Your Viewpoint in a Section	
Changing the Depth of a Section	
Detailing Sections	
Editing Section Properties	
Deleting a Section	
Creating Dynamic Cutaway Views	
What is Stereo Vision?	
Displaying a 3D Stereo View	
Adjusting Stereo Vision Settings	
Changing the Display Mode	
Chapter 20: View Filters	
Filtering the Display	241
Displaying (Hiding Elements on Lesstions	
Displaying / Hiding Elements on Locations	
Displaying / Hiding Elements on the Terrain	
Displaying/Hiding Elements on the Terrain	
Displaying/Hiding Notation Objects	
Calastian Filtering	
Selection Futering	
Making Elements on Locations Selectable or Non-Selectable	
Making Building Locations Selectable or Non-Selectable	
Making Elements on the Terrain Selectable or Non-Selectable	
Making Notation Objects Selectable or Non-Selectable	
Making Framing Mode Components Selectable or Non-Selectable	
Hiding items by Picking in Your Drawing	
Hiding All Except What Is Picked	
Making Items Non-Selectable by Picking in Your Drawing	
Making All Non-Selectable Except What Is Picked	

Chapter 21: Managing View Windows	249
Adding a Group to the View Manager	
Renaming a Group in the View Manager	
Deleting a Group in the View Manager	
Expanding and Collapsing Groups in the View Manager	
Creating a New View Window	
Copying a View Window	
Renaming a View Window	
Opening View Windows	
Closing View Windows	
Deleting a View Window	
Re-ordering Views in the View Manager	
Displaying/Hiding the View Tabs	
Making a View Window the Current View Window	
Switching Between View Windows	
Tiling View Windows	
Cascading View Windows	
Returning to a Maximized View	
Restoring the Previous Arrangement of View Windows	
Chapter 22: Drafting in Model View	
Adding Text in Model View	255
Editing Text Content in Model View	256
Changing the Style of Text in Model View	256
Updating a Text Style Globally	257
Changing the Justification of Multi-line Text	257
Finding and Replacing Text in Model View	257
Adding Text with a Leader in Model View	257
Moving and Stretching a Leader	258
Changing the Style of Text with a Leader in Model View	258
Updating the Style of Text with a Leader Globally	258
Moving Leader Text in Model View	259
Editing Leader Text in Model View	259
Dimensions (Model View)	259
Setting the Current Dimension Style in Model View	259
Creating Automatic Exterior Dimensions	260
Specifying Exterior Dimension Settings	260
Creating Automatic Interior Dimensions	262
Specifying Interior Dimension Settings	263
Creating Linear Dimensions in Model View	263
Creating Aligned Dimensions in Model View	264
Creating Angular Dimensions in Model View	264
Creating Continuous Dimensions in Model View	265
Creating Baseline Dimensions in Model View	265
Creating Overall Dimensions in Model View	л
Creating Room Dimensions	267
Moving a Dimension Line in Model View	268
0	

Stretching	Dimensions in Model View	
Aligning I	Dimensions in Model View	
Joining Di	imensions in Model View	
Splitting D	Dimensions in Model View	
Overriding	g Dimension Text in Model View	
Changing	the Style of a Dimension in Model View	
Updating	a Dimension Style Globally	
Drawing I	Lines in Model View	
Extending	a Line to Another Object (Model View)	
Trimming	a Line to Another Object (Model View)	
Breaking a	a Line in Model View	
Drawing A	Arcs in Model View	
Editing the	e Curve of an Arc in Model View	
Extending	; an Arc to Another Object (Model View)	
Trimming	; an Arc to Another Object (Model View)	
Drawing C	Circles in Model View	
Creating E	Ellipses in Model View	
Creating E	Elliptical Arcs in Model View	
Drawing F	Rectangles in Model View	
Drawing H	Hatched Polygons in Model View	
Editing the	e Style of a Polygon's Boundary Line (Model View)	
Editing a I	Polygon's Hatch Pattern in Model View	
Drawing F	Revision Clouds in Model View	
Defining F	Revision Cloud Settings in Model View	
Convertin	g 2D Lines and Shapes to 3D Building Elements	
Drawing B	Batt Insulation in Model View	
Drawing F	Rigid Insulation in Model View	
Drawing a	a Wood Section in Model View	
Drawing a	a Masonry Section in Model View	
Editing Ma	asonry Section Properties in Model View	
Drawing a	a Cut Line in Model View	
Inserting V	Views in Model View	
Resizing a	Nodel View Image (in Model View)	
Importing	; CAD Files in Model View	
Specifying	g a Default Drafting Objects Directory	
Importing	a PDF File in Model View	
Chapter 2	3: Drafting in Worksheet View	
Workshee	rt View	
Switching	to Worksheet View	
The Works	sheet View Environment	
Controllin	ng the Display of the Paper Shadow in Worksheet View	
Controllin	ing the Display of Page Margin Lines in Worksheet View	
Layer Con		
Selecting a	a Layer to Draw On	
Creating a	a New Layer for the Current Project	
Editing La	ayers in the Current Project	

Deleting a Layer	
Transferring an Object to Another Layer	
Overriding Color, Line Type and Line Weight	
Controlling the Visibility of Layers	
Controlling the Ability to Select and Edit Objects on Layers	
Controlling Whether or Not a Layer is Plotted	
Using Object Snaps in Worksheet View	
Selecting the Objects Snaps You Want to Use	
Using a Specific Object Snap (Snap Override)	
Turning Object Snaps On and Off	
Inserting a SmartView of your Model in Worksheet View	
Inserting a Saved SmartView	
Enabling/Disabling Polygon Consolidation When Inserting a SmartView	
Defining the Appearance of Datum Lines in Elevations and Sections	
Editing a SmartView	
Redefining a SmartView's Settings	
Updating a SmartView with Changes to your Model	
Updating SmartViews Globally	
Deleting Unreferenced SmartViews from Memory	
Customizing the Default Title Block	
Deleting the Default Drawing Border and Title Block	
Importing CAD Files in Worksheet View	
Importing a PDF File in Worksheet View	
Importing an Image in Worksheet View	
Scaling an Inserted Image	
Adding Text in Worksheet View	
Editing Text in Worksheet View	
Finding and Replacing Text in Worksheet View	
Controlling the Quality of Text Through Antialiasing	
Adding Text with a Leader in Worksheet View	
Editing the Style or Content of Leader Text in Worksheet View	
Moving Leader Text in Worksheet View	
Changing the Style of a Leader in Worksheet View	
Scaling Leader Arrows in Worksheet View	
Setting the Current Dimension Style in Worksheet View	
Creating Linear Dimensions in Worksheet View	
Creating Aligned Dimensions in Worksheet View	
Creating Angular Dimensions in Worksheet View	
Creating Continuous Dimensions in Worksheet View	
Creating Baseline Dimensions in Worksheet View	
Creating Overall Dimensions in Worksheet View	
Moving Dimension Text in Worksheet View	
Resetting the Dimension Text Position in Worksheet View	
Moving a Dimension Line in Worksheet View	
Stretching Dimensions in Worksheet View	
Aligning Dimensions in Worksheet View	

Joining Dimensions in Worksheet View	
Splitting Dimensions in Worksheet View	
Changing the Style of a Dimension in Worksheet View	
Overriding Dimension Text in Worksheet View	
Scaling a Dimension in Worksheet View	
Scaling Dimension Values in Worksheet View	
Drawing Lines in Worksheet View	
Drawing Polylines in Worksheet View	
Joining Objects to a Polyline	
Curving a Polyline (Worksheet View)	
Decurving a Polyline	
Drawing Arcs in Worksheet View	
Editing the Curve of an Arc in Worksheet View	
Drawing Circles in Worksheet View	
Drawing an Ellipse in Worksheet View	
Drawing Elliptical Arcs in Worksheet View	
Drawing Polygons in Worksheet View	
Drawing Hatched Polygons in Worksheet View	
Editing a Polygon's Hatch Pattern Line Properties in Worksheet View	
Editing a Polygon's Hatch Pattern in Worksheet View	
Drawing Rectangles in Worksheet View	
Drawing Revision Clouds in Worksheet View	
Defining Revision Cloud Settings in Worksheet View	
Creating Hatching Using Boundary Hatch	
Editing Hatch Pattern Line Properties in Worksheet View	
Editing an Object's Hatch Pattern in Worksheet View	
Drawing Batt Insulation in Worksheet View	
Drawing Rigid Insulation in Worksheet View	
Drawing a Wood Section in Worksheet View	
Drawing a Masonry Section in Worksheet View	
Editing Masonry Section Properties in Worksheet View	
Drawing a Cut Line in Worksheet View	
Inserting a Roof Symbol	
Creating a Block	
Inserting a Block	
Inserting a Block from Another Project	
Scaling a Block	
Editing a Block	
Deleting Unreferenced Blocks	
Defining Attributes	
Editing an Attribute Before it is Captured in a Block	
Creating a Block with Attributes	
Inserting a Block with Attributes	
Editing Block Attribute Values	
Editing Objects in Worksheet View	
Selecting Objects in Worksheet View	

	Moving Objects in Worksheet View	
	Rotating Objects in Worksheet View	
	Duplicating Objects in Worksheet View	
	Arraying Objects in Worksheet View	
	Offsetting Objects in Worksheet View	
	Stretching Objects in Worksheet View	
	Scaling Objects in Worksheet View	341
	Mirroring Objects in Worksheet View	
	Breaking Objects in Worksheet View	
	Extending Objects in Worksheet View	
	Trimming Objects to Other Objects (Worksheet View)	
	Chamfering Objects in Worksheet View	
	Filleting Objects in Worksheet View	
	Exploding Objects in Worksheet View	
	Deleting Objects in Worksheet View	
	Editing the Line Style of Lines, Shapes and Details in Worksheet View	
	Measuring Distance and Angle in Worksheet View	
	Drafting Settings	
	Selecting a Default Line Style for Drafting Objects	
	Selecting a Default Line Style for Revision Clouds	
	Specifying a Default Line Style and Pattern for Hatched Polygons	
	Selecting a Default Layer and Line Style for Details	
	Assigning Layers to Objects in Model View	
Cł	hapter 24: Estimating and Analysis	347
	Calculating Area and Perimeter	347
	Calculating the Space in Rooms and Areas	348
	Defining the Extents of Room Regions to be Inserted in Rooms	
	Defining the Extents of Room Regions to be inserted in Rooms	340
	Editing Room Region Properties	
	Editing Room Region Properties	
	Editing Room Region Properties Resizing or Reshaping a Room Region	
	Editing Room Region Properties Resizing or Reshaping a Room Region Moving Room Region Text Project Estimate	
	Editing Room Region Properties Resizing or Reshaping a Room Region Moving Room Region Text Project Estimate	
	Editing Room Region Properties Resizing or Reshaping a Room Region Moving Room Region Text Project Estimate Editing the Quantitative Properties of Elements Editing Material Briging	349 350 350 350 350 351 351
	Editing Room Region Properties Resizing or Reshaping a Room Region Moving Room Region Text Project Estimate Editing the Quantitative Properties of Elements Editing Material Pricing	
	Editing Room Region Properties Resizing or Reshaping a Room Region Moving Room Region Text Project Estimate Editing the Quantitative Properties of Elements Editing Material Pricing Exporting the Quantitative Properties of all Catalog Elements to a Text File Attaching Assemblies to Elements.	
	Editing Room Region Properties Resizing or Reshaping a Room Region Moving Room Region Text Project Estimate Editing the Quantitative Properties of Elements Editing Material Pricing Exporting the Quantitative Properties of all Catalog Elements to a Text File Attaching Assemblies to Elements	
	Editing Room Region Properties	
	Editing Room Region Properties Resizing or Reshaping a Room Region	

Viewing a Cut List	
Optimizing a Cut List	
Printing a Cut List	
Specifying How Members are Reported in the Quantity Report	
Specifying Purchased Lengths for Members	
Disabling or Enabling Cut List Generation	
Creating a New Report Template	
Opening a Report Template	
Copying a Report Template	
Editing a Report Template	
Deleting a Report Template	
Report Template Properties	
Editing the Name of a Report Template	
Editing the File Extension of Generated Quantity Reports	
Controlling the Display of the Currency Symbol in a Quantity Report	
Using Optimized Results for Members in the Quantity Report	
Specifying the Sort Order of Materials in a Quantity Report	
Filtering Elements from the Quantity Report	
Specifying How Information is Displayed in a Quantity Report	
Editing Headers and Footers in a Report Template	
Editing Element Entries in a Report Template	
Editing Fields in a Record	
Specifying Formulas	
Adding Fields to a Record	
Deleting Fields from a Record	
Generating a Quote	
Generating a Door Schedule	
Generating a Window Schedule	
Generating a Member Schedule	
Generating a Room Region Schedule	
Printing a Schedule	
Defining the Field Layout of a Schedule	
Defining the Text Styles in a Schedule	
Defining the Line Styles in a Schedule	
Defining Schedule Marks	
Removing Schedule Marks	
Analyzing a Model in Autodesk® Green Building Studio®	
Exporting Model Data to REScheck	
Chapter 25: Rendering & Animation	
3D RealView <sup>TM</sup> Rendering	
How 3D RealView <sup>TM</sup> Rendering Works	
Setting the Viewpoint for a Rendering	
Setting the Lighting for a Rendering	
Defining Your Location and Time of Day	
Calculating True North from Magnetic North	

Creating a 3D RealView <sup>TM</sup> Rendering	
Adjusting the Rendering Quality	
Using Antialiasing in Rendering	
Turning Electrical Lights Off when Rendering	
Ignoring IES Data When Rendering	
Turning Daylight Off	
Changing the Sky Conditions	
Adjusting the Noise Reduction Level When Rendering	
Using Physically Accurate Daylight When Rendering	
Using a Solid Color for the Background When Rendering	
Controlling Background Brightness in Renderings	
Adjusting the Light Coming from Light Fixtures	
Editing the Surface Properties of Materials	
Troubleshooting a 3D RealView <sup>™</sup> Rendering	
Performing a Graphics System Check	
Animations	
Drawing an Animation Path	
Drawing Separate Camera and Target Paths	
Previewing an Animation	
Repeating an Animation During the Preview	
Changing the Path Order in an Animation	
Choosing the Paths to Include in an Animation	
Moving an Animation Path's Control Points	
Adding Control Points to an Animation Path	
Removing a Control Point from an Animation Path	
Editing the Elevation of a Control Point	
Editing the Elevation of the Target in an Animation	
Adding Sounds to an Animation	
Removing Sounds from an Animation	
Saving an Animation to a File	
Editing the Default Name or Save Location of Animation Files	
Saving Individual Animation Frames	
Changing the Speed of an Animation	
Compressing Animation Files	
Specifying an Output Size for Animation Files	
Specifying a Frame Rate for Animations	
Ray Tracing an Animation	
Pausing to Review the Image When Ray Tracing an Animation	
Turning Animation Paths On and Off	
Deleting an Animation Path	
Sounds	
Attaching Sounds to Elements in Your Drawing	
Attaching Sounds to Elements in the Catalog	
Playing Sounds	
Removing Sounds from Elements in Your Drawing	
Removing Sounds from Elements in the Catalog	

Selecting a Default Sounds Directory	
Chapter 26: Drawing Aids	
Setting Up a Drawing Grid	
Turning the Drawing Grid On and Off	
Using the Grid Snap	
Turning the Grid Snap On and Off	
Using Ortho	
Using Object Snaps in Model View	
Using Angle Snap	
Object Snap Tracking	
Collision Control	
Using the Commander	
Turning the Commander On or Off	
Displaying the Coordinate Icon	
Specifying the Insertion Height of an Element Before Inserting It	
Selecting a Reference Point When Inserting and Editing Elements	
Entering Values in the Commander	
Specifying Distance and Direction in the Commander	
Defining X, Y and Z Coordinates	
Direction and Angle of Rotation	
Rotating Elements Using the Commander	
Curving Elements Using the Commander	
Measuring Distance in Model View	
Querying Elements	
Chapter 27: Project Management	
Opening a Saved Project	
Changing the Number of Files on the Recently Used File List	
Repairing Damaged Projects	
Saving Projects	
Setting the Automatic Save	
Setting the Number of Backups	
Specifying a Default Save Location for Projects	
Saving a Project as a Template	
Setting the Path to the Templates Directory	
Selecting a Directory for Temporary Files	
Closing Projects	
Defining a View's Print Properties	
Printing Drawings	
Printing Across Multiple Sheets of Paper	
Printing to a File	
Creating a PDF File	
Batch Printing	
Vector Printing vs. Raster Printing	
Disabling Vector Printing in Worksheet View	
Importing an Image to Trace	
Resizing a Project Trace Image	
<u> </u>	

Tracing the Imported Floor Plan	
Displaying/Hiding Project Trace Images	
Deleting a Project Trace Image	
Importing a Photo Board	
Saving Imported Photo Boards to the Catalog	
Inserting a Photo Board from the Catalog	
Moving a Photo Board	
Rotating a Photo Board in 2D	
Changing the Elevation of a Photo Board	
Changing a Photo Board from Stationary to Rotating and Vice Versa	
Editing the Size of a Photo Board	
Deleting a Photo Board	
Creating Transparency in Photo Board Images	
Importing Custom Objects into Your Drawing	
Importing a PXF File	
Importing Catalog Content from a BIM File	
Importing Project Content from a BIM File	
Exporting the Current View to a 2D Image File	
Exporting the 2D Drawing to a 2D AutoCAD File	
Exporting the 3D Model	
Exporting to iLevel® Javelin®	
Exporting to MiTek® TrussFramer <sup>™</sup>	
Exporting to Boise BC Framer®	
Exporting to Keymark® KeyBuild®	
Exporting to 20-20 Design	
Exporting to Sketchfab	
Exporting Catalog Content to a BIM File	
Exporting Project Content to a BIM File	
Accessing the Project Manager	
Specifying Project Information	
Keeping Track of Revisions	
Chapter 28: Catalogs	
Adding a Group or Subgroup to a Catalog	
Moving a Subgroup to the Root	
Renaming a Group in a Catalog	
Deleting a Group from a Catalog	
Saving Edited Elements in Your Drawing to a Catalog	
Importing Custom Objects into Your Catalog	
Creating a New Catalog	
Locking a Catalog	
Unlocking a Catalog	
Downloading Manufacturer Content	
Opening a Catalog	
Selecting a Default Catalog Directory	
Viewing Catalog Properties	
Saving a Catalog	

Creating a Copy of a Catalog	
Chapter 29: Elements	
Using the Element Manager	
Searching for Elements in the Element Manager	
Viewing Element Properties	
Adding Elements to a Catalog	
Editing Elements in a Catalog	
Deleting Elements from a Catalog	
Working with Property Pages	
Using Automatic Name Generation	
- Modifying the Name Generation Formula	
Editing the Size and Composition of an Element	
Changing an Element's Orientation	
Controlling What Parts of an Element are Displayed	
Simplifying an Element	
Editing an Element's Insertion Point	
Editing an Element's Snap Edge	
Editing an Element's Insertion Height	
Editing an Element's Layer Assignments	
Editing an Element's Material Settings	
Editing an Element's Pattern Settings	
Adding Notes to an Element's Properties	
Adding a Hyperlink to an Element's Properties	
Opening an Element's Hyperlink	
Making a Hyperlink Current	
Chapter 30: Libraries	
Using the Library Manager	
Customizing the Materials Library	
Editing Material Properties	
Using Textures from Outside Sources	
Filtering the Materials Library	
Specifying the Location of the Textures Directory	
Customizing the Material Usages Library	
Enforcing Material Usages	
Customizing the Material Filters Library	
Customizing the Patterns Library	
Editing a Pattern	
Setting Up the Manufacturers Library	
Attaching Manufacturer Information to an Element	
Attaching Manufacturer Information to a Material	
Displaying Manufacturer Logos in the Catalog and Property Pages	
Customizing the Labels Library	
Customizing the Text Styles Library	
Customizing the Dimension Styles Library	
	469
Dimension Style Properties	

Customizing the Line Weights Library	
Enabling/Disabling Line Weights	
Customizing the Layers Library	
Customizing the Light Source Library	
Specifying the Location of the Light Source Directory	
Customizing the Assemblies Library	
Defining an Assembly	
Customizing the Usages Library	
Customizing the Phases Library	
Customizing the Categories Library	
Customizing the Units of Measure Library	
Customizing the Profiles Library	
Creating Custom Profiles	
Exporting a Polyline to the Profile Library	
Editing a Custom Profile	
Customizing the Wall Span Table Library	
Defining a Wall Opening Span Table	
Customizing the Head/Sill/Jamb Library	
Defining a Head/Sill/Jamb Configuration	
Customizing the Wall Infill Library	
Defining a Wall Infill Configuration	
Customizing the Intersection Lookup Table Library	
Customizing the End Condition Library	
Defining an End Condition Configuration	500
Demining an End Condition Configuration	
Chapter 31: Workspace Settings	503
Chapter 31: Workspace Settings	<b>503</b>
Displaying Toolbars in a Tabbed Format.	
Chapter 31: Workspace Settings Displaying/Hiding Toolbars Displaying Toolbars in a Tabbed Format Displaying Toolbars in a Non-Tabbed Format	
Chapter 31: Workspace Settings Displaying/Hiding Toolbars Displaying Toolbars in a Tabbed Format Displaying Toolbars in a Non-Tabbed Format Changing the Color of Toolbar Areas	<b></b>
Chapter 31: Workspace Settings Displaying/Hiding Toolbars Displaying Toolbars in a Tabbed Format Displaying Toolbars in a Non-Tabbed Format Changing the Color of Toolbar Areas Customizing Toolbar Colors and Effects	<b></b>
Chapter 31: Workspace Settings Displaying/Hiding Toolbars Displaying Toolbars in a Tabbed Format Displaying Toolbars in a Non-Tabbed Format Changing the Color of Toolbar Areas Customizing Toolbar Colors and Effects Saving a Toolbar Color Theme	<b>503</b> 
Chapter 31: Workspace Settings Displaying/Hiding Toolbars Displaying Toolbars in a Tabbed Format Displaying Toolbars in a Non-Tabbed Format Changing the Color of Toolbar Areas Customizing Toolbar Colors and Effects Saving a Toolbar Color Theme Loading a Toolbar Color Theme	<b></b>
Chapter 31: Workspace Settings Displaying/Hiding Toolbars Displaying Toolbars in a Tabbed Format Displaying Toolbars in a Non-Tabbed Format Changing the Color of Toolbar Areas Customizing Toolbar Colors and Effects Saving a Toolbar Color Theme Loading a Toolbar Color Theme Moving Toolbars	<b>503</b> 
Chapter 31: Workspace Settings Displaying/Hiding Toolbars Displaying Toolbars in a Tabbed Format Displaying Toolbars in a Non-Tabbed Format Changing the Color of Toolbar Areas Customizing Toolbar Colors and Effects Saving a Toolbar Color Theme Loading a Toolbar Color Theme Moving Toolbars Displaying/Hiding the Information Panel	<b>503</b>
Chapter 31: Workspace Settings   Displaying/Hiding Toolbars   Displaying Toolbars in a Tabbed Format   Displaying Toolbars in a Non-Tabbed Format   Changing the Color of Toolbar Areas   Customizing Toolbar Colors and Effects   Saving a Toolbar Color Theme   Loading a Toolbar Color Theme   Moving Toolbars   Displaying/Hiding the Information Panel	<b>503</b>
Chapter 31: Workspace Settings   Displaying/Hiding Toolbars   Displaying Toolbars in a Tabbed Format   Displaying Toolbars in a Non-Tabbed Format   Changing the Color of Toolbar Areas   Customizing Toolbar Colors and Effects   Saving a Toolbar Color Theme.   Loading a Toolbars   Displaying/Hiding the Information Panel   Moving the Information Panel   Moving the Information Panel	<b>503</b> 
Defining an End Condutor Configuration   Chapter 31: Workspace Settings   Displaying/Hiding Toolbars in a Tabbed Format   Displaying Toolbars in a Non-Tabbed Format   Changing the Color of Toolbar Areas   Customizing Toolbar Colors and Effects   Saving a Toolbar Color Theme.   Loading a Toolbar Color Theme.   Moving Toolbars   Displaying/Hiding the Information Panel   Moving the Information Panel   Moving the Information Panel   Displaying/Hiding the Status Bar.	<b>503</b>
Defining an End Condutor Configuration   Chapter 31: Workspace Settings   Displaying/Hiding Toolbars in a Tabbed Format   Displaying Toolbars in a Non-Tabbed Format   Changing the Color of Toolbar Areas   Customizing Toolbar Colors and Effects   Saving a Toolbar Color Theme   Loading a Toolbar Color Theme   Moving Toolbars   Displaying/Hiding the Information Panel   Moving the Information Panel   Moving the Information Panel   Displaying/Hiding the Status Bar   Changing the Color of the Drawing Area	<b>503</b>
Defining an End Condutor Configuration   Chapter 31: Workspace Settings   Displaying /Hiding Toolbars in a Tabbed Format   Displaying Toolbars in a Non-Tabbed Format   Changing the Color of Toolbar Areas   Customizing Toolbar Colors and Effects   Saving a Toolbar Color Theme.   Loading a Toolbar Color Theme.   Moving Toolbars   Displaying/Hiding the Information Panel   Moving the Information Panel   Moving the Information Panel   Displaying/Hiding the Status Bar.   Changing the Color of the Drawing Area   Displaying/Hiding the Scroll Bars	<b>503</b>
Chapter 31: Workspace Settings   Displaying /Hiding Toolbars   Displaying Toolbars in a Tabbed Format   Displaying Toolbars in a Non-Tabbed Format   Changing the Color of Toolbar Areas   Customizing Toolbar Colors and Effects   Saving a Toolbar Color Theme   Loading a Toolbar Color Theme   Moving Toolbars   Displaying/Hiding the Information Panel   Moving the Information Panel   Displaying/Hiding the Status Bar   Changing the Color of the Drawing Area   Displaying/Hiding the Scroll Bars   Controlling the Launch of the Startup Screen	<b>503</b>
Chapter 31: Workspace Settings   Displaying/Hiding Toolbars in a Tabbed Format   Displaying Toolbars in a Tabbed Format   Displaying Toolbars in a Non-Tabbed Format   Changing the Color of Toolbar Areas   Customizing Toolbar Colors and Effects   Saving a Toolbar Color Theme   Loading a Toolbar Color Theme   Moving Toolbars   Displaying/Hiding the Information Panel   Resizing the Information Panel   Moving the Information Panel   Displaying/Hiding the Status Bar   Changing the Color of the Drawing Area   Displaying/Hiding the Scroll Bars   Controlling the Launch of the Startup Screen   Viewing the Startup Screen	<b>503</b> 503503503503504504505505505505506506506506507507507507507507
Defining an End Continuor Configuration   Chapter 31: Workspace Settings.   Displaying/Hiding Toolbars in a Tabbed Format   Displaying Toolbars in a Non-Tabbed Format   Changing the Color of Toolbar Areas   Customizing Toolbar Colors and Effects.   Saving a Toolbar Color Theme.   Loading a Toolbar Color Theme.   Moving Toolbars   Displaying/Hiding the Information Panel   Resizing the Information Panel.   Moving the Information Panel   Displaying/Hiding the Status Bar.   Changing the Color of the Drawing Area   Displaying/Hiding the Startup Screen   Viewing the Startup Screen   Viewing the Startup Screen	<b>503</b>
Defining an End Contribution Configuration   Chapter 31: Workspace Settings   Displaying/Hiding Toolbars   Displaying Toolbars in a Tabbed Format   Displaying Toolbars in a Non-Tabbed Format   Changing the Color of Toolbar Areas   Customizing Toolbar Colors and Effects   Saving a Toolbar Color Theme   Loading a Toolbar Color Theme   Moving Toolbars   Displaying/Hiding the Information Panel   Resizing the Information Panel   Moving the Information Panel   Displaying/Hiding the Status Bar.   Changing the Color of the Drawing Area   Displaying/Hiding the Scroll Bars   Controlling the Launch of the Startup Screen   Viewing the Startup Screen   Customizing Keyboard Shortcuts   Improving Graphics Display	<b>503</b> 503503503503503504504504505505505505506506507507507507507507507507
Defining an End Control Configuration   Chapter 31: Workspace Settings.   Displaying/Hiding Toolbars   Displaying Toolbars in a Tabbed Format   Displaying Toolbars in a Non-Tabbed Format   Changing the Color of Toolbar Areas   Customizing Toolbar Colors and Effects.   Saving a Toolbar Color Theme.   Loading a Toolbar Color Theme.   Loading a Toolbars .   Displaying/Hiding the Information Panel   Moving Toolbars   Displaying/Hiding the Status Bar.   Changing the Color of the Drawing Area   Displaying/Hiding the Scroll Bars   Controlling the Launch of the Startup Screen   Viewing the Startup Screen   Customizing Keyboard Shortcuts   Improving Graphics Display.   Hardware Acceleration	<b>503</b>

Disabling Interactive Lighting	
Glossary	511
Index	